SignComp™

Signtech

FH - Flexholder



FH-P



CTSBAR-P



FH-BOLT



FHU-CLIP



FH w/ Fabric

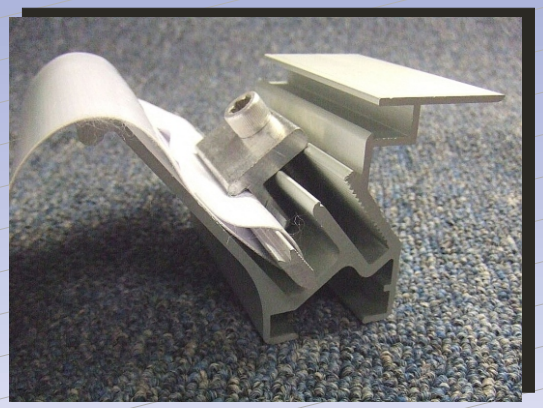

FH w/ R3F-10

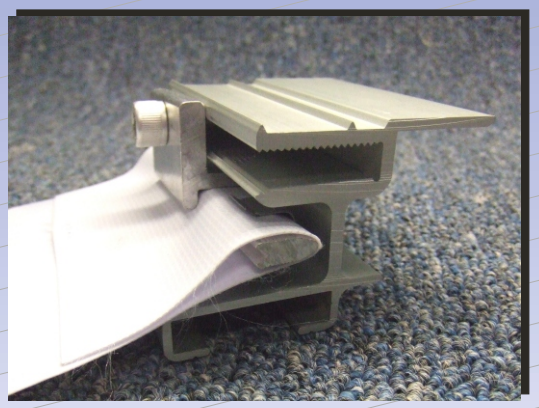

FH w/RF-10

3032 Walker Ridge Dr. NW Grand Rapids MI 49544

Toll Free 877-784-0405

SignComp™

FH

Face material Cut Size.

RF-10 - Add 2” of face material to all four sides, to the outside dimension of the assembled frame. (Add a total of 4” of face material to both the height and width of the assembled frame.)

R3F-10 - Add 2-3/4” of face material to all four sides, to the outside dimension of the assembled frame. (Add a total of 5-1/2” of face material to both the height and width of the assembled frame.)

Flexholder placement line.

The flexholders are placed approximately 1-1/2”in from the trimmed to size face
Spacing for the flexholder is determined by the size of the cabinet.

Up to 200 sq. ft.	10” on center
200-300 sq. ft.	8”on center
300-400 sq. ft.	6” on center
400sq. ft. and over	5” on center

3032 Walker Ridge Dr. NW Grand Rapids MI 49544 Toll Free 877-784-0405

SignComp™

Signtech
FH Installation

1. Start by marking out the hardware location lines on the face.

2. Make sure the flexface is placed around the flexholder exactly as shown, if it is not the sign face may loosen when tensioned.

3. Place teeth clips (FHU-CLIP) on each side of the flexholder to ensure that the flexholder bar will stay in place.

4. After all the flexholders are in place, place the sign face onto the frame. Turn the FH-Bolt using a 1/4" Allen Head drill bit driver so that it self threads into the flex frame. Work for the center out.

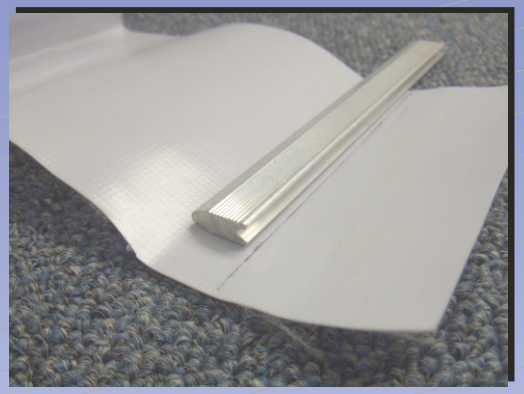



3032 Walker Ridge Dr. NW Grand Rapids MI 49544

Toll Free 877-784-0405